




Installation instruction

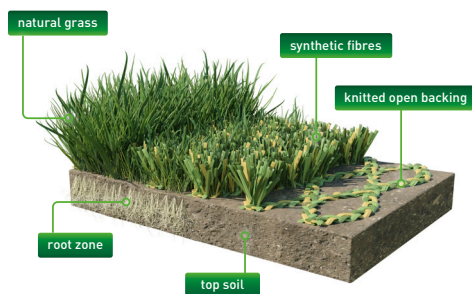


Avalon Urban Hybrid is a sturdy knitted artificial grass mat topped with fibers in different pile heights. The mat has wide openings in the form of a honeycomb structure. These wide openings allow the natural grass to grow. This unique knitted honeycomb structure provides reinforcement to the root zone of the natural grass. In addition, the artificial grass fibers protect the blades of the natural grass from wear and tear.

There are 2 methods of installing Avalon Urban Hybrid:

1. Avalon Urban Hybrid is installed on an existing natural grass mat.
2. Avalon Urban Hybrid is installed on a surface prepared and seeded for natural grass.

Installation method 1:

Avalon Urban Hybrid is installed on an existing natural grass mat.

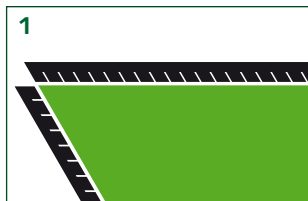


Measure and mark the area where Avalon Urban Hybrid will be laid and make the surface stone- and weed-free.




Mow the grass lower than 2.5cm.




Rake the natural grass loose with a hand rake or scarifier. Dress the lawn with soil or sand depending on its condition. Support the grass with extra seeds and fertilizer.

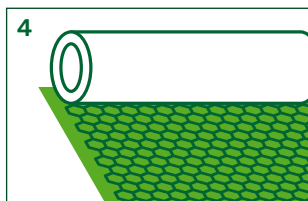

Roll out the Avalon Urban Hybrid rolls on the raked grass. Allow 5% to 10% stretching when anchoring the mat.

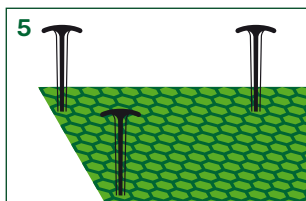


Stretch the artificial grass evenly and anchor the mat with the biodegradable pins provided.

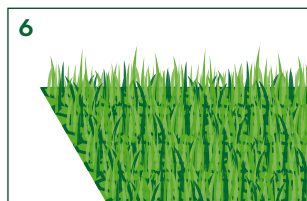


This method of installation is low-impact which allows you to create a reinforced natural grass mat within 8 weeks.

Installation method 2:


Avalon Urban Hybrid is installed on a surface prepared and sown for natural grass.

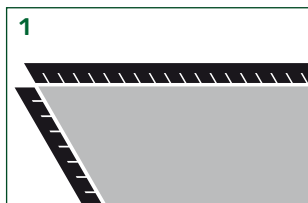


Measure and mark the area where Avalon Urban Hybrid will be laid and make the surface stone- and weed-free.

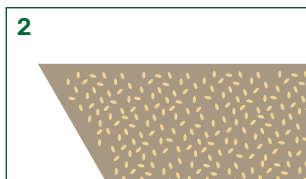


Use soil and sand, then use a whacker on the surface to make the ground firm. Use a rake to make small furrows in the ground before you spread the seeds.

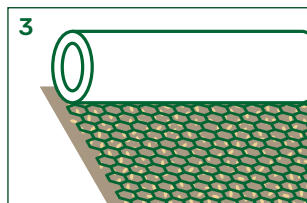


Roll out the Avalon Urban Hybrid rolls on the ground. Allow for 5% to 10% stretching when anchoring the mat.

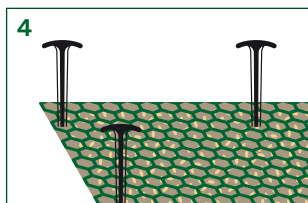

Stretch the artificial grass evenly and anchor the mat with the biodegradable pins provided.

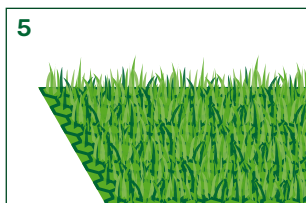

After a week, the first natural grass will start to grow through the artificial grass.

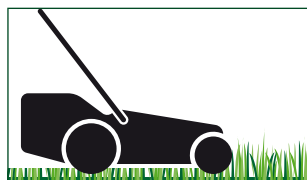

Within 12 weeks, the grass will be ready for its first mowing. You can mow the grass earlier if you use a small mower that you walk with. This will make the lawn denser.